

mimSAFE


www.mimsafe.se



ASSEMBLY INSTRUCTIONS

VARIOCAGE

double





A Floor Rear


00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items

B Floor Front


00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items

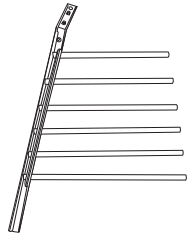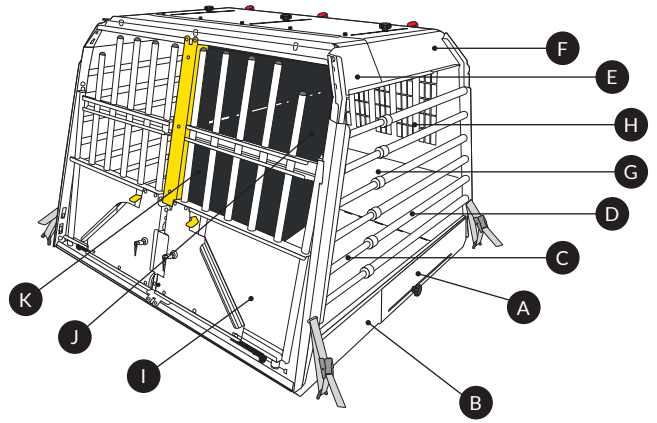


C Sidebar

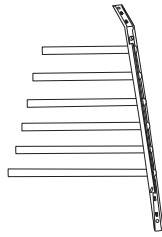


D Sidebar

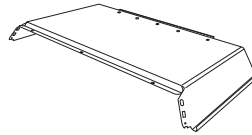

E Roof Front

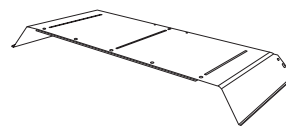

F Roof Rear

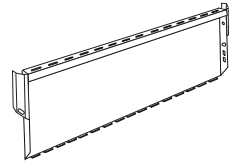

G Lower Panel


00377	X4	2X
00383	X5	
00361	X5	
00362	X6	
00364	X6	
00365	X6	
00382	X7	
00369	X8	
Product no	Pipes	No of items

00377	X4	2X
00383	X5	
00361	X5	
00362	X6	
00364	X6	
00365	X6	
00382	X7	
00369	X8	
Product no	Pipes	No of items

00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items


00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items

00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items

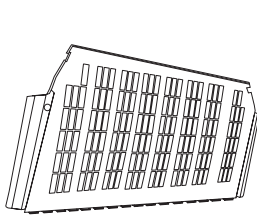

H Escape Hatch

00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items

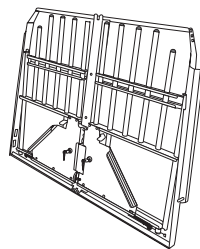


I Door Section

00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items



J Divider Rear

00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items




K Divider Front

00377	1X
00383	
00361	
00362	
00364	
00365	
00382	
00369	
Product no	No of items


ASSEMBLY KIT IS DIMENSIONED FOR THE LARGEST CAGE, FOR SMALLER CAGES YOU HAVE MORE PARTS THAN YOU NEED

M-460641D 18X rubber	M-SM6X14IA 24X 	M-SM6X12 2X 	M-460641AQ 3X red	ALLEN KEY 4 1X 	M-B251,56,5SLD 4X Ø25mm 	M-460641AY 00377 8X 00383 10X 00361 10X 00362 12X 00364 12X 00365 12X 00382 14X 00369 16X rubber end caps	M-460641BA 00377 8X 00383 10X 00361 10X 00362 12X 00364 12X 00365 12X 00382 14X 00369 16X plastic end caps
M-R3015M5S 6X 	M-B13265SLD 6X Ø13mm plastic	M-VBM5X16 6X 	M-10240 4X 		M-BR6X19X15 4X Ø19mm 		


STEP
1

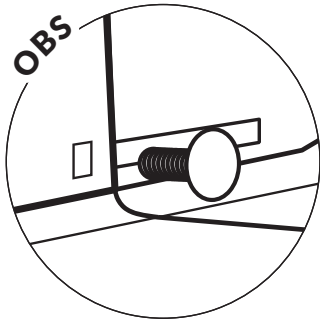



M-R3015M5S 2X	M-B13265SLD 2X Ø13mm plastic	M-VBM5X16 2X
		

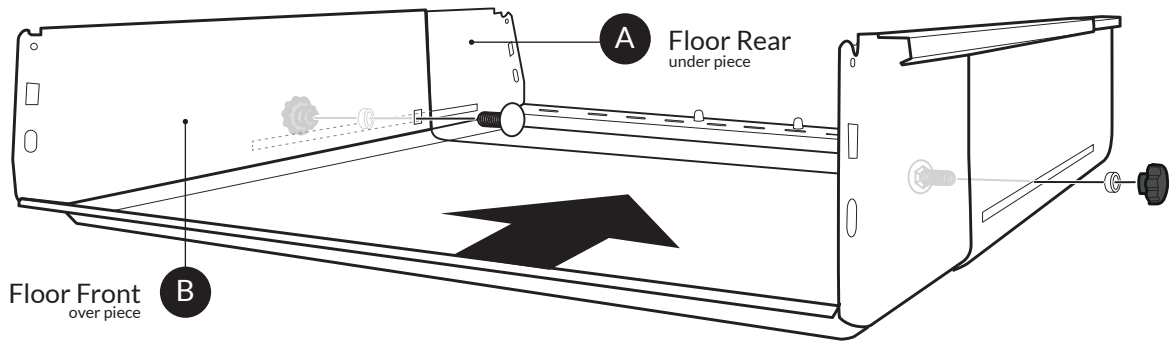

STEP
2


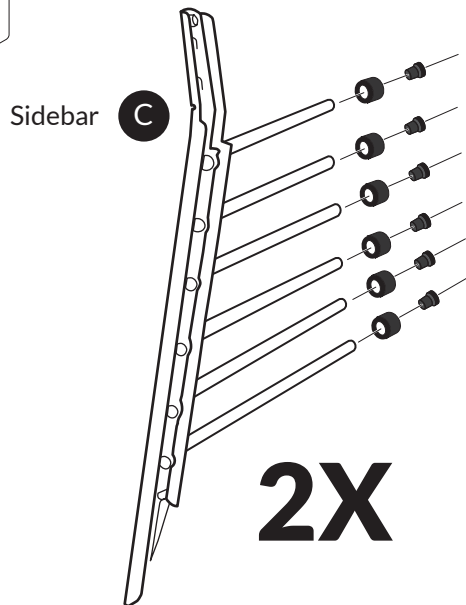


STEP
3

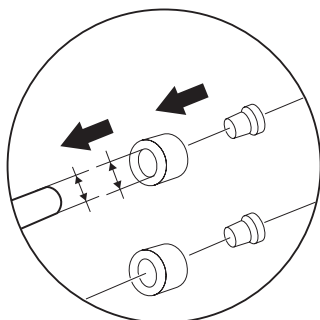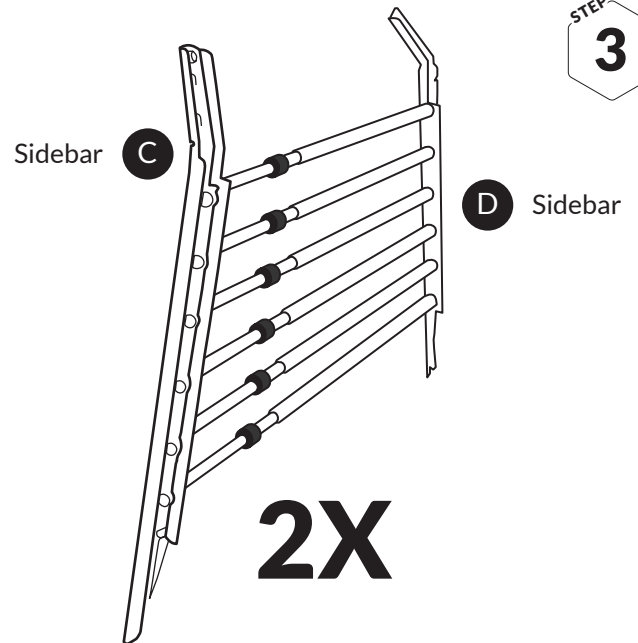




M-460641AY		M-460641BA	
			
00377	8X	00377	8X
00383	10X	00383	10X
00361	10X	00361	10X
00362	12X	00362	12X
00364	12X	00364	12X
00365	12X	00365	12X
00382	14X	00382	14X
00369	16X	00369	16X
rubber end caps		plastic end caps	

STEP
4

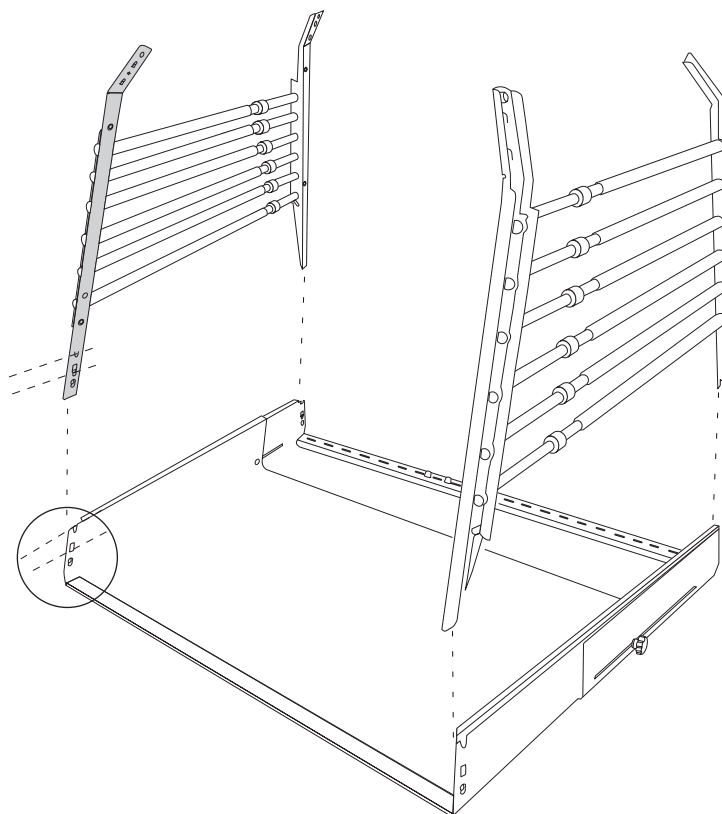
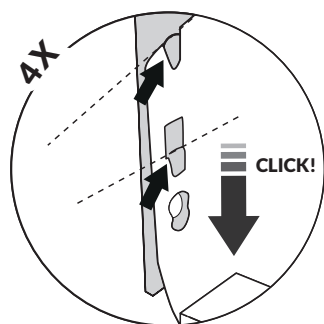


STEP
5



180°

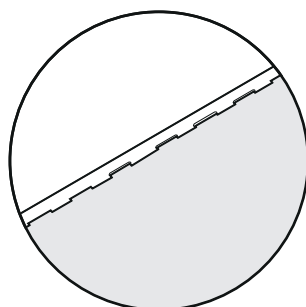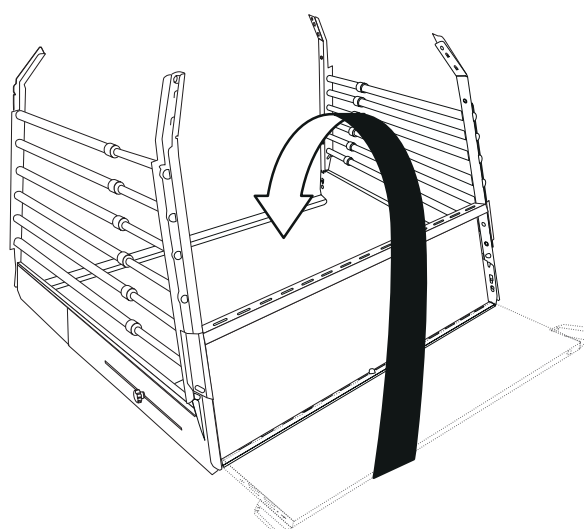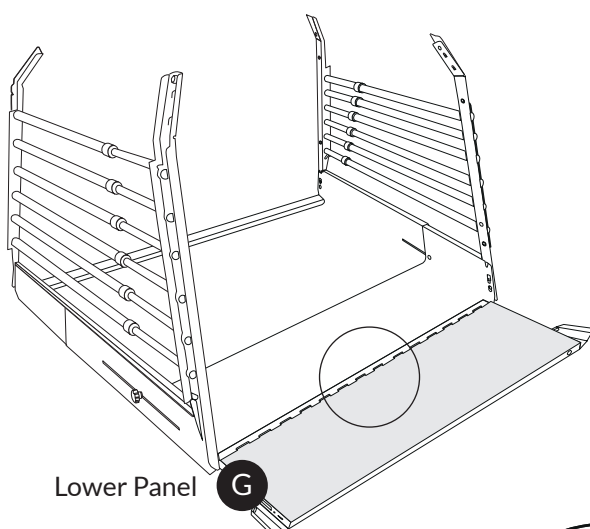





STEP
6

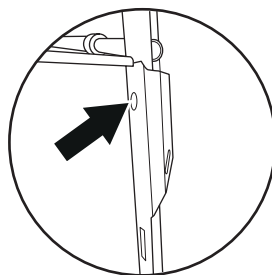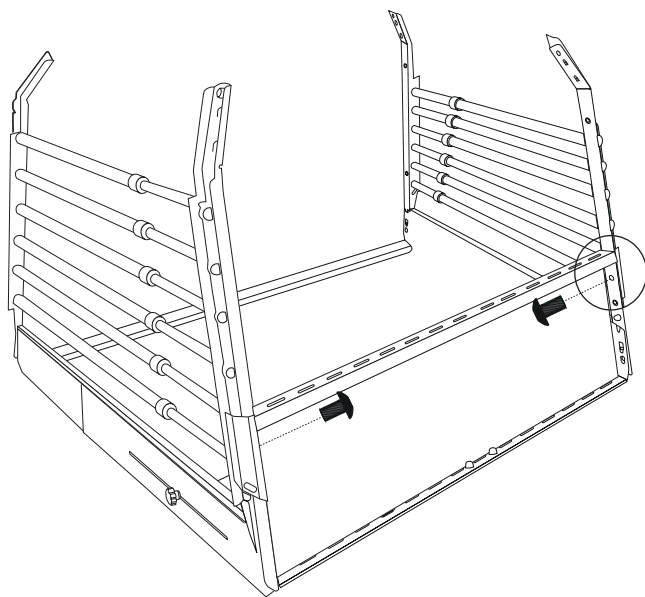

M-SM6X12
2X

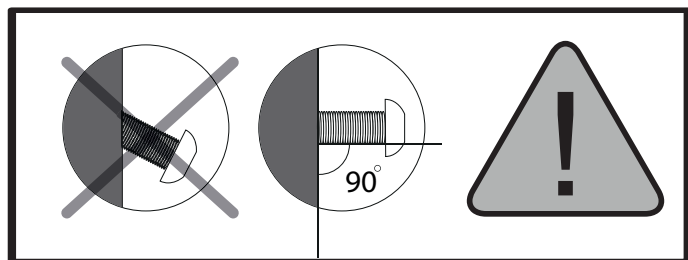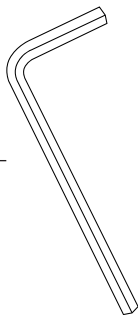


STEP
7

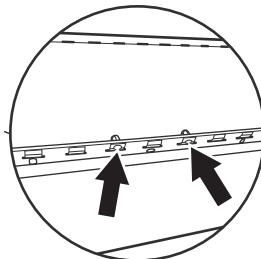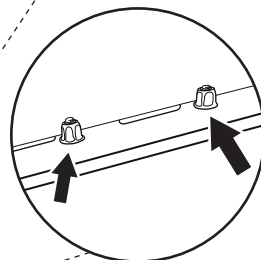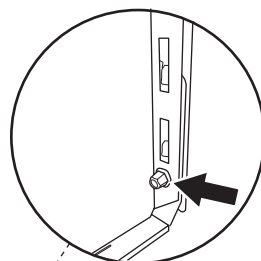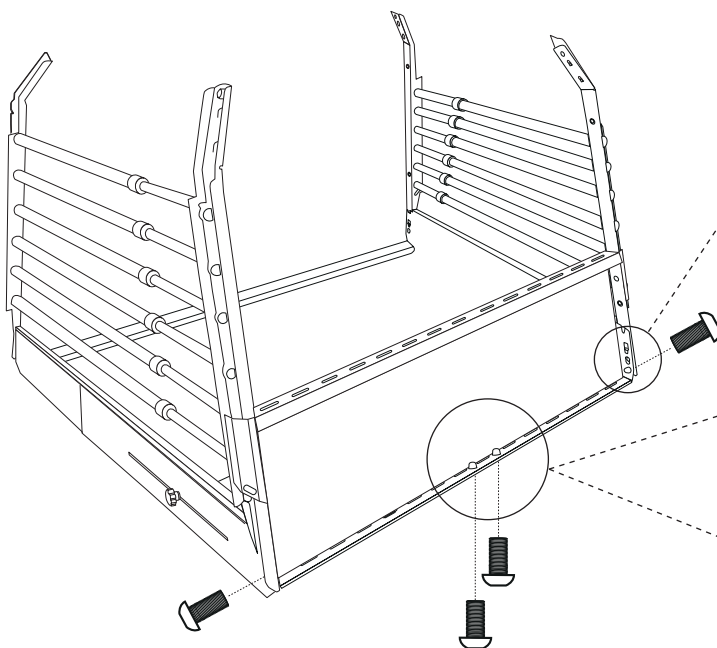


M-SM6X14IA
4X




STEP
8

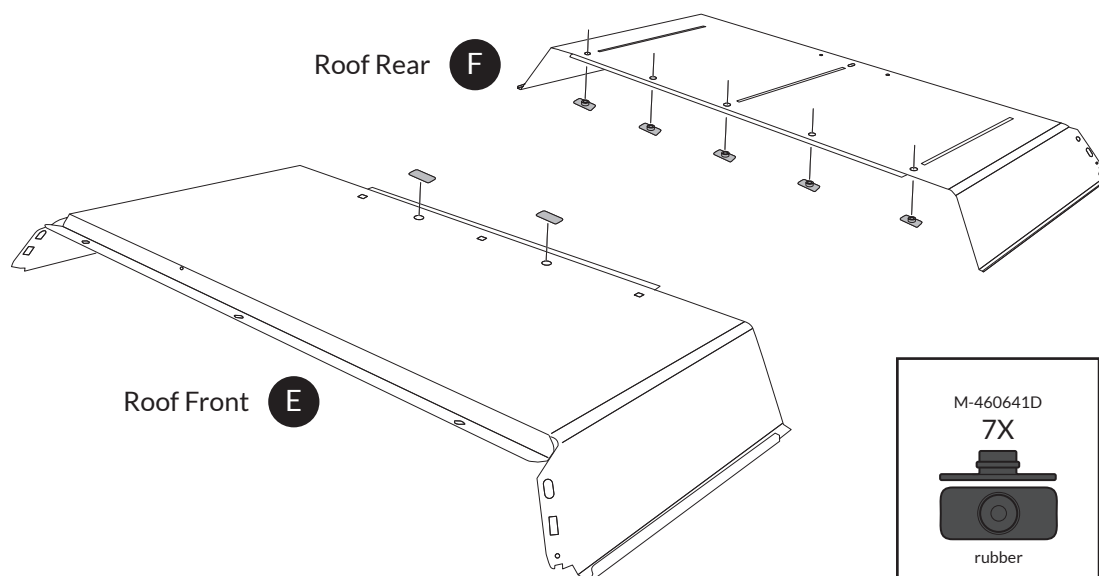

STEP
9



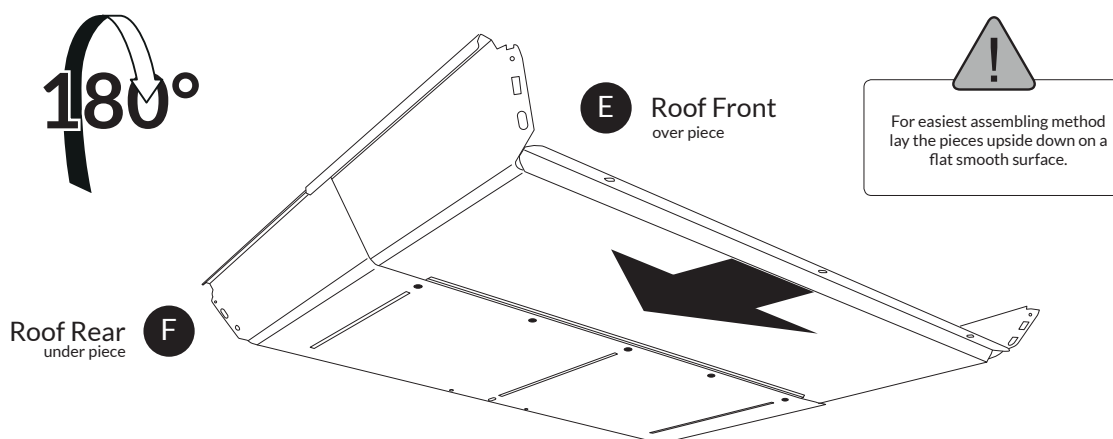


STEP
10

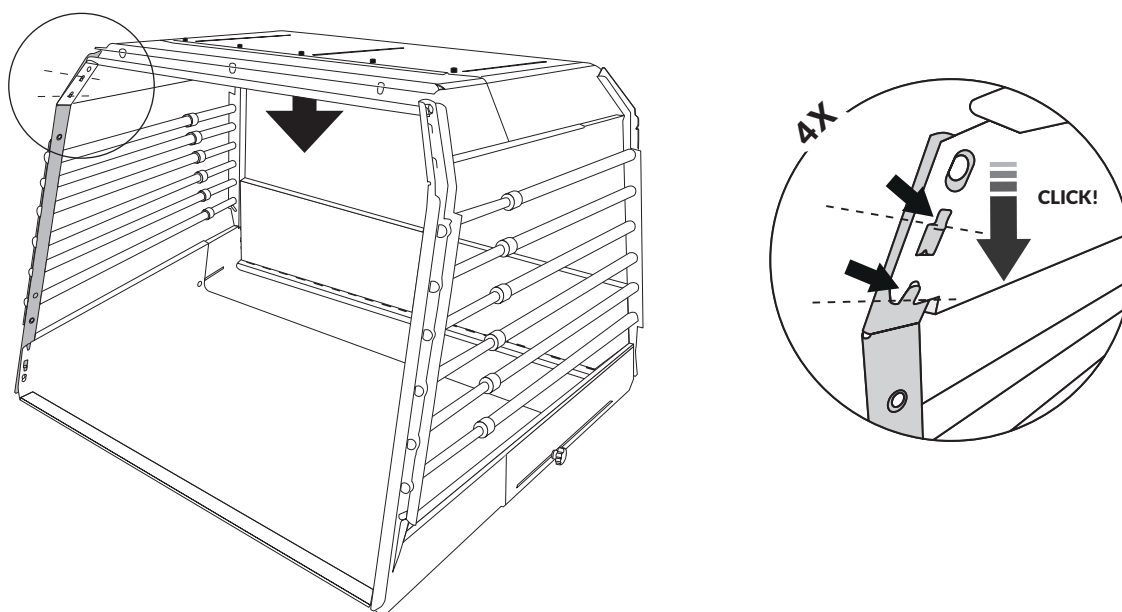


STEP
11

M-SM6X14IA
2X

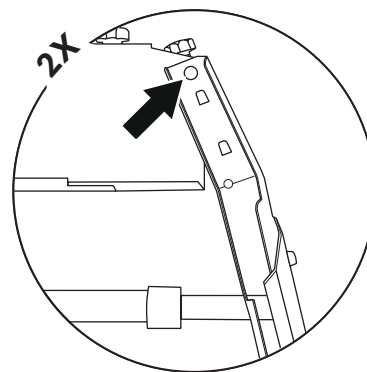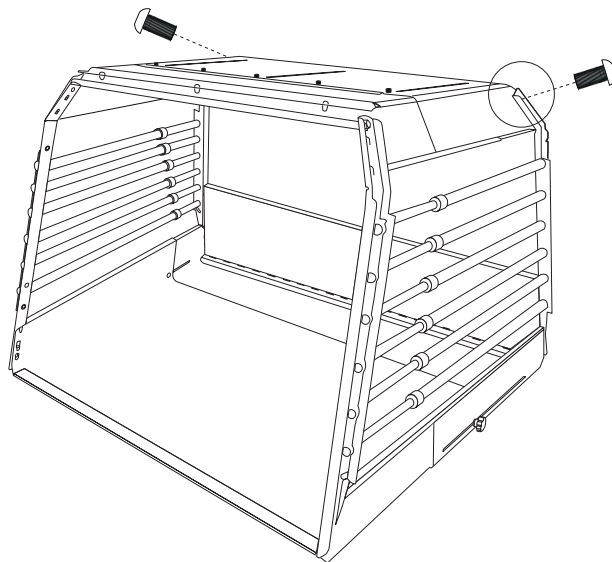

STEP
12

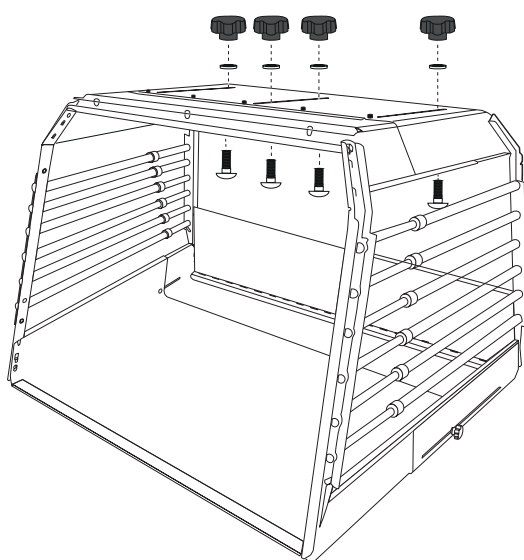

M-R3015M5S
4X








M-B13265SLD
4X
Ø13mm
plastic








M-VBM5X16
4X






STEP
13

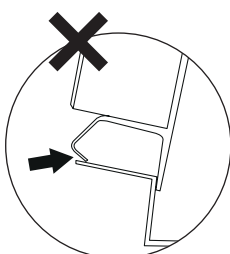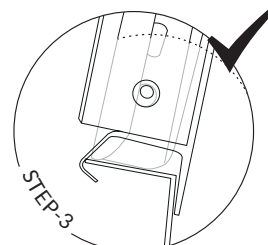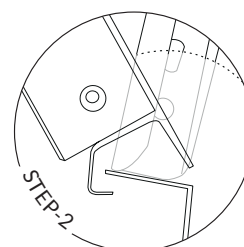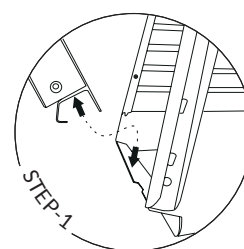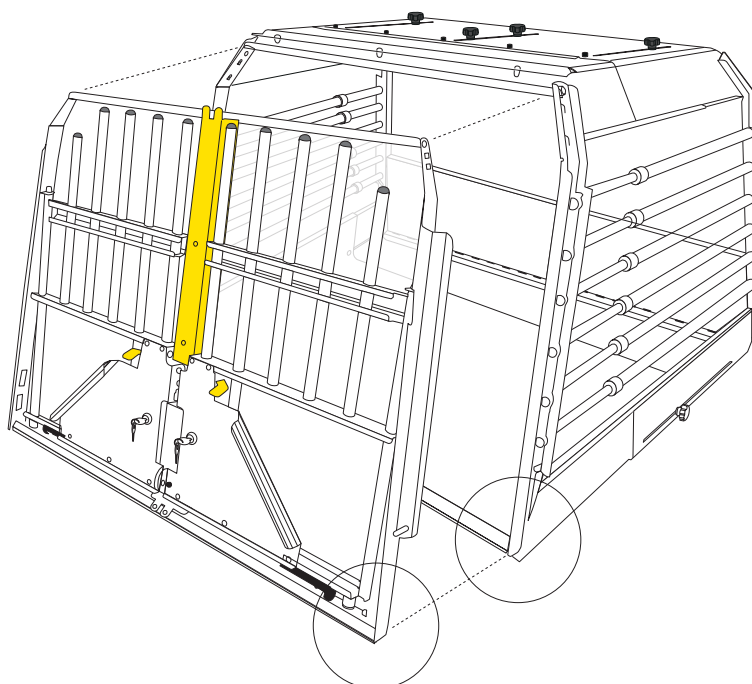


STEP
14

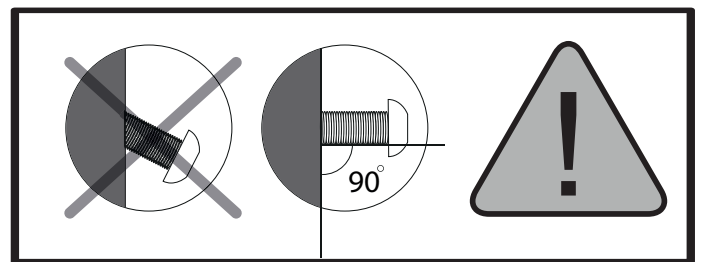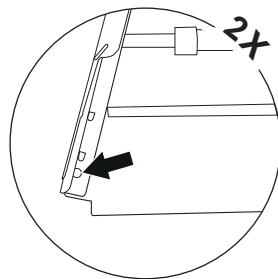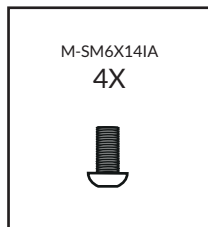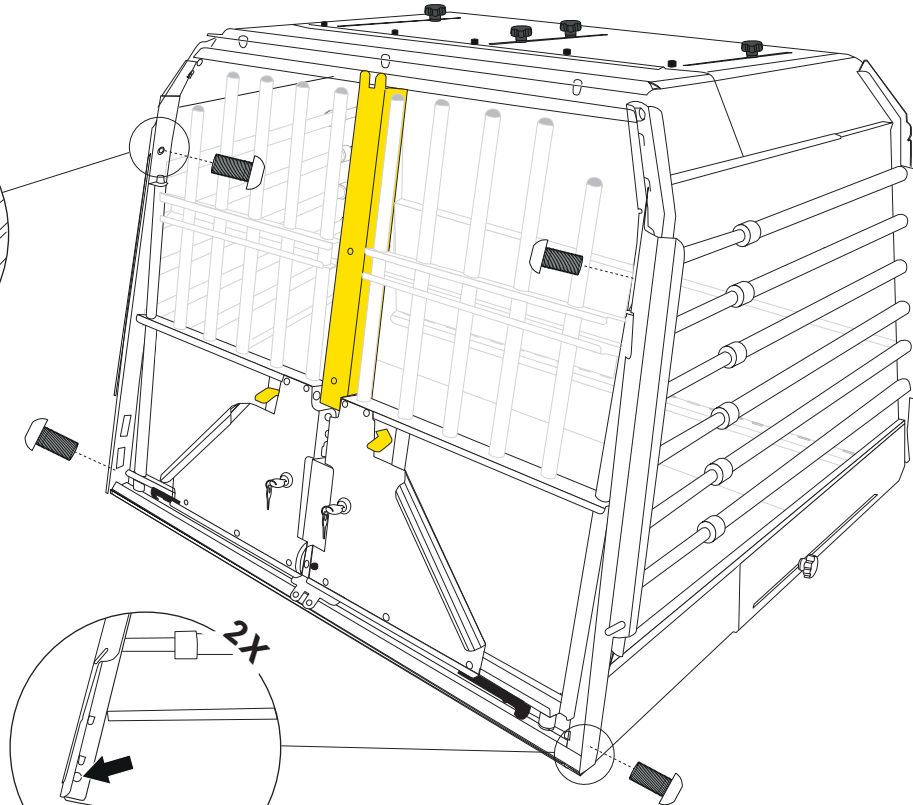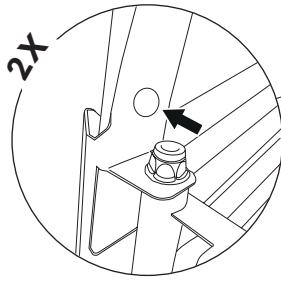


STEP
15

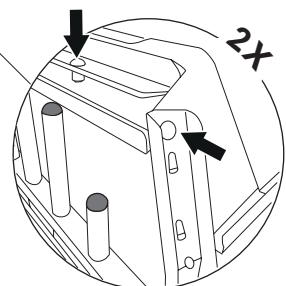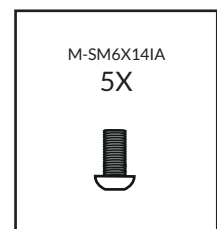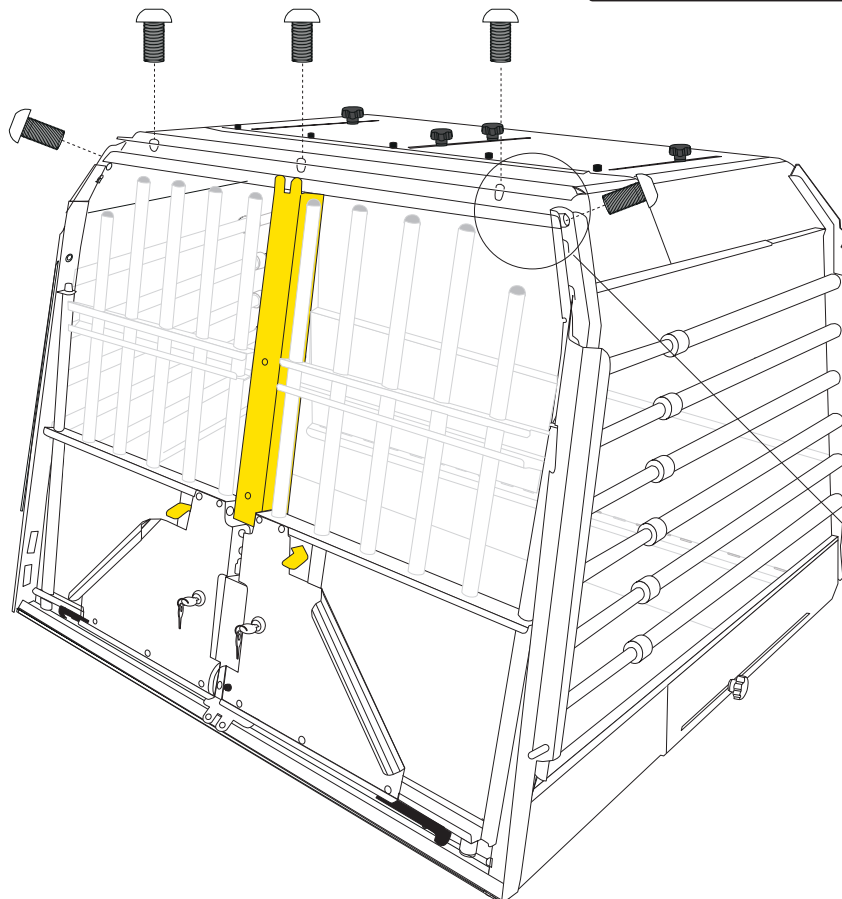


STEP
16

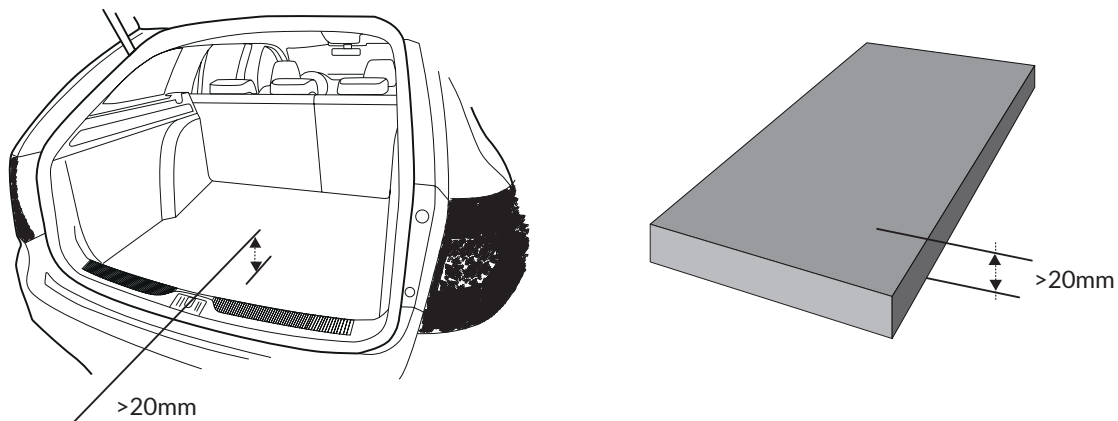

STEP
17

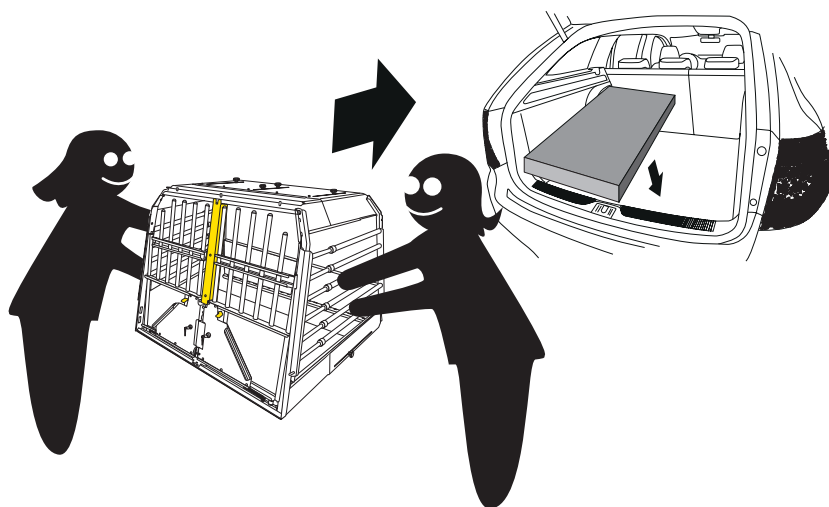


STEP
18

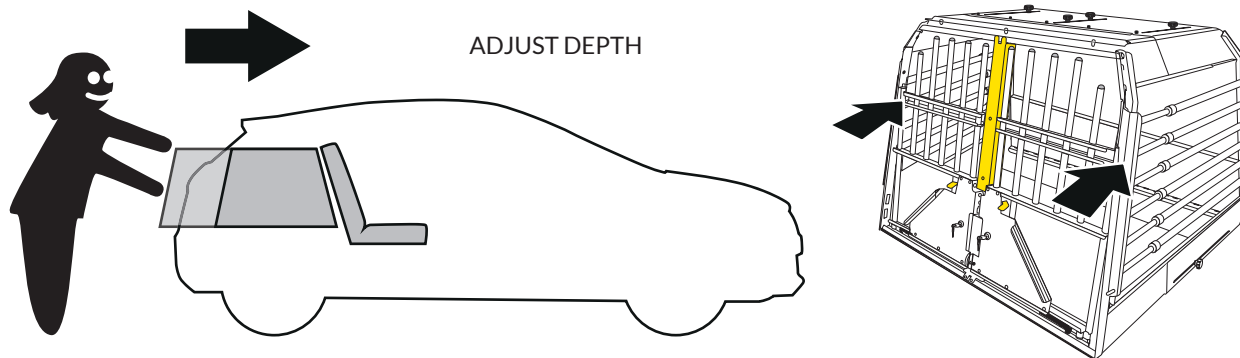


STEP
19



STEP
20

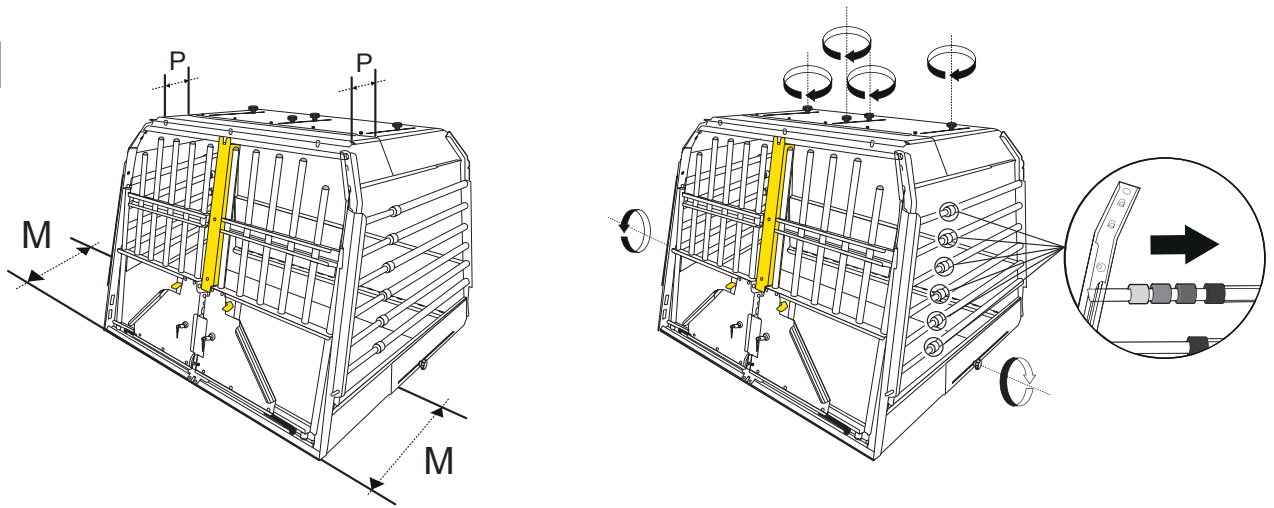




STEP
21

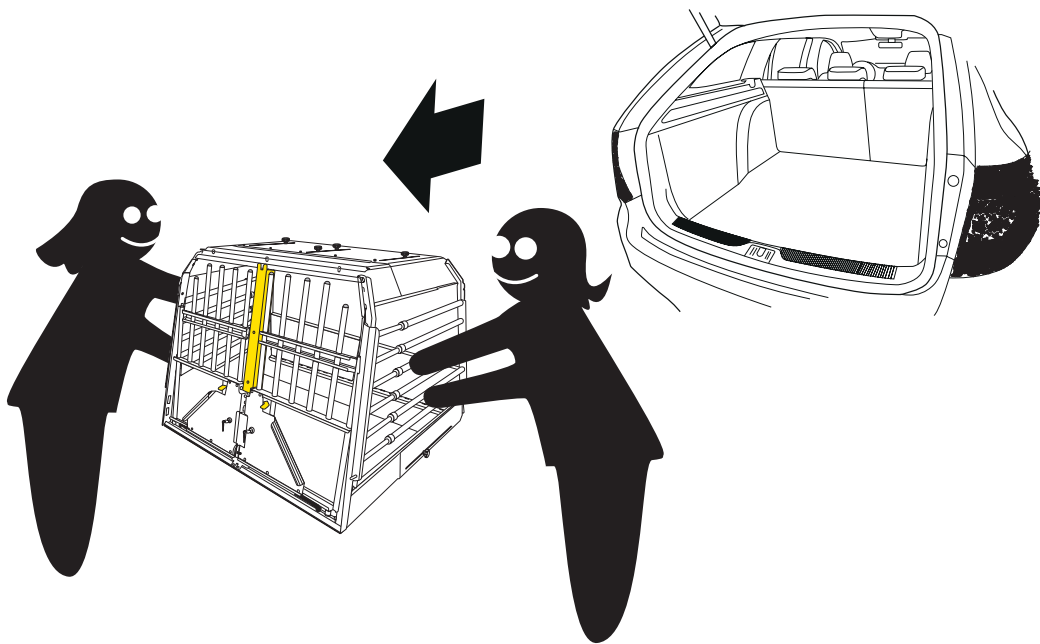


STEP
22

K Divider Front

J Divider Rear

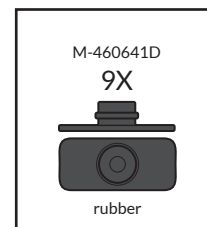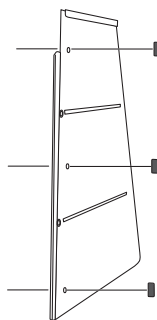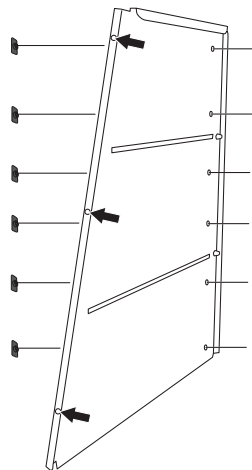


STEP
23

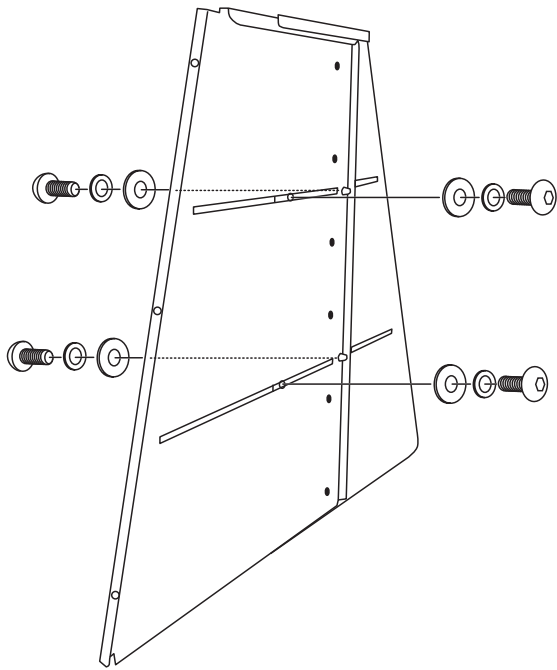


M-SM6X14IA 4X 	M-BR6X19X1S 4X Ø19mm 	M-B251,56,5SLD 4X Ø25mm 
--	--	---

STEP
24

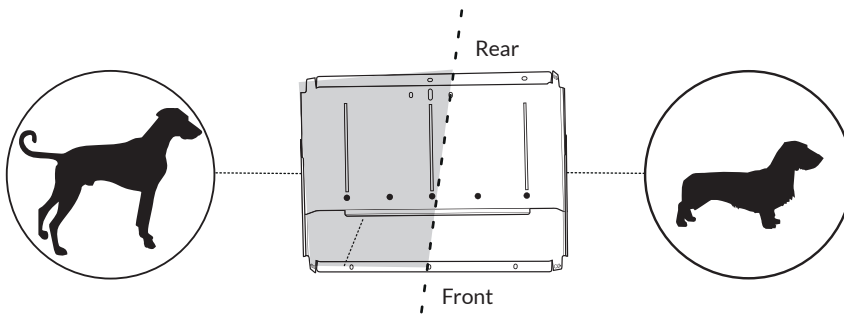

If you got different size of dogs they might need different size of room in the cage.

Divider is fixed in the front of and bottom of cage only top is adjustable.



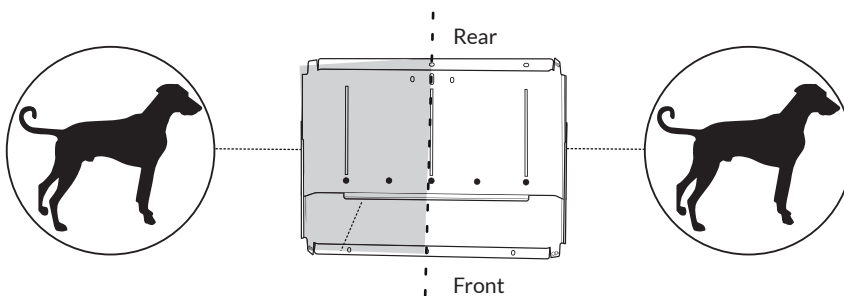


If you got same size of dogs they could have equal size of room in the cage.

STEP
25a

Front

Rear

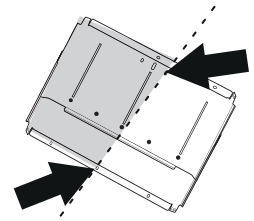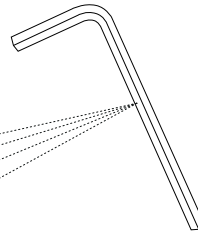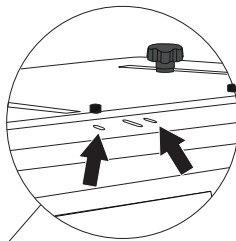

M-SM6X14IA


5X



For a cage with different size dogs. Put two screws at top. At the rear either to the left or right.

Also two screws at the bottom of the cage. At the rear either to the left or the right.




Tighten screws in panel.

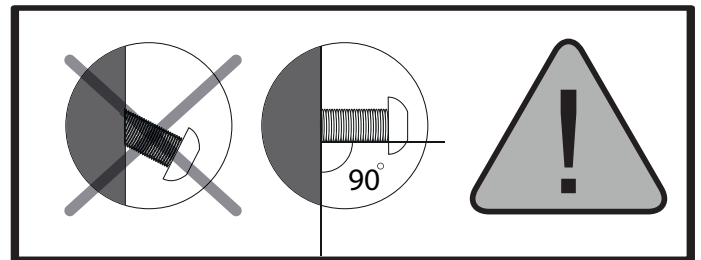

STEP
25b

Front

Rear

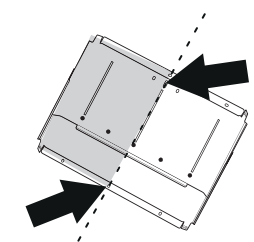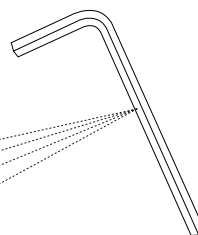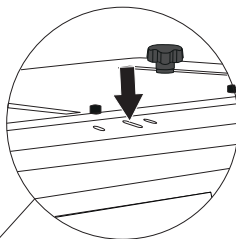

M-SM6X14IA

5X




For a cage with equal size dogs. Put two screws at top. In the middle.


Also two screws at the bottom of the cage. In the middle.

Tighten screws in panel.


STEP
26

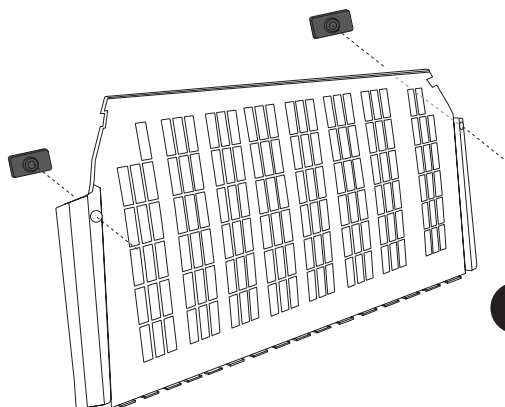


H Escape Hatch

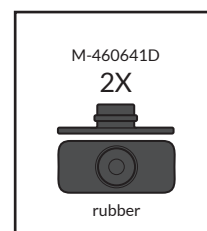





STEP
27

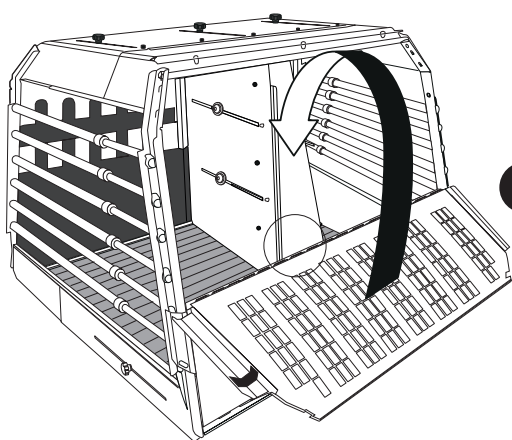


H Escape Hatch

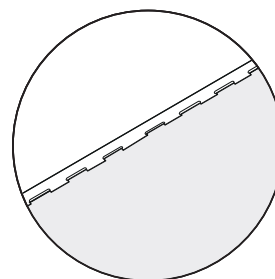

STEP
28

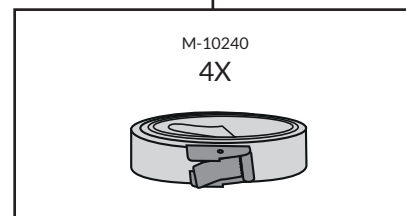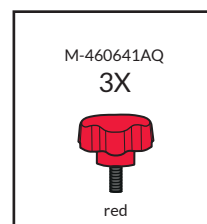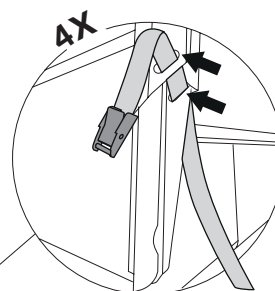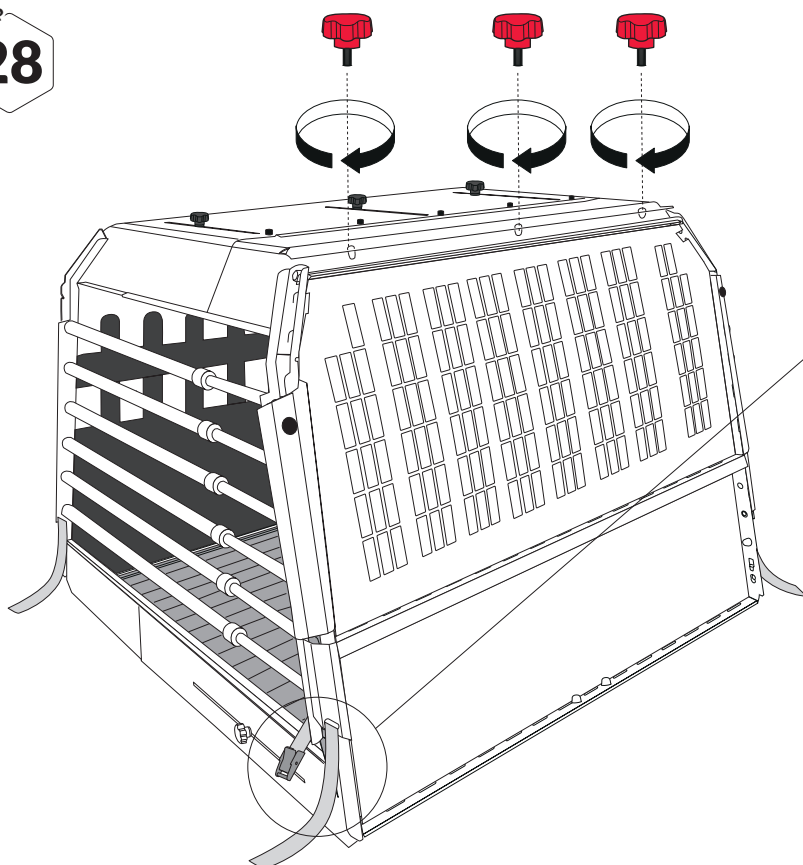

STEP
29

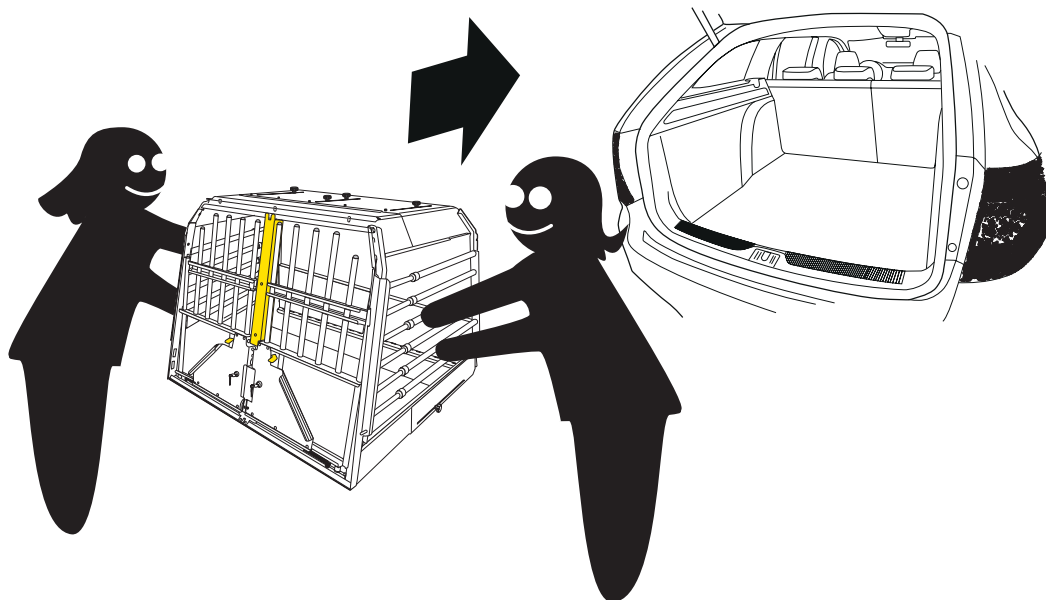

STEP
30

