


Förpackningen från PeBe innehåller:

- En ljuddämpande tygklädsel anpassad för mellanvägg i plåt
- En rulle med 8 meter självhäftande kardborre

1. Montera karborren på plåtväggen. Se bild nedan för placering. Ta bort skyddspappret på baksidan av kardborreremsan och klistra sedan fast den på väggen.
2. Börja med monteringen utav mittdelen på tygklädseln och se till att den eventuella utskärningen kring fönstret hamnar bra. Arbeta dig sedan utåt och peta till sist in kanterna på klädseln där det är möjligt.

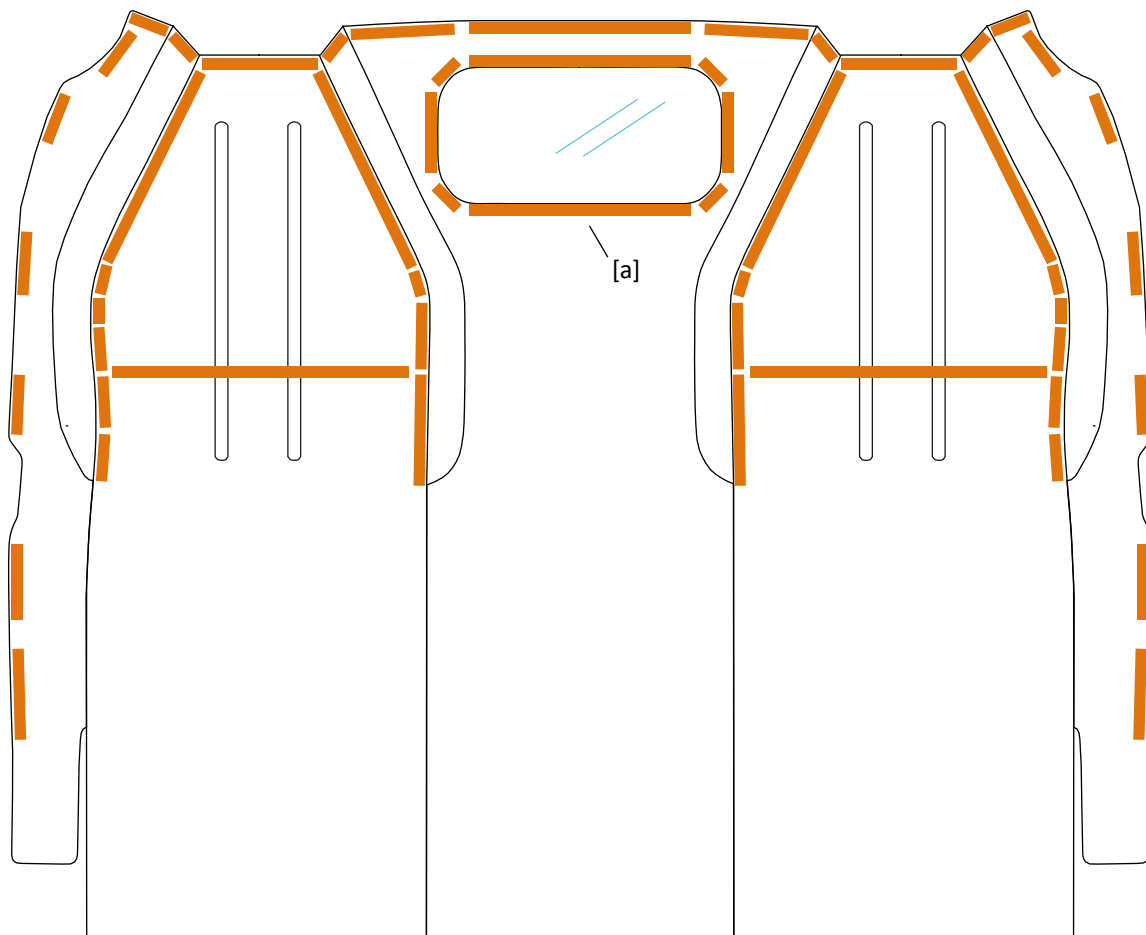


— = Självhäftande kardborre

[a] = Placera kardborre längs med kanterna runt fönstret i de fall som det är utskuret för detta i tygklädseln

The bag from Pebe contains:

- A sound-dampening upholstery adapted for a sheet-metal partition wall
- A roll of 8 meters of self-adhesive velcro

1. Mount the velcro on the sheet-metal wall. See illustration below for placement. Remove the paper on the back of the velcro and then glue it to the wall.
2. Start with the mounting of the middlepart of the upholstery, and make sure that the eventual cutout for the window is placed accurately. Then work your way outwards and finally tuck in the edges of the upholstery where it is possible.

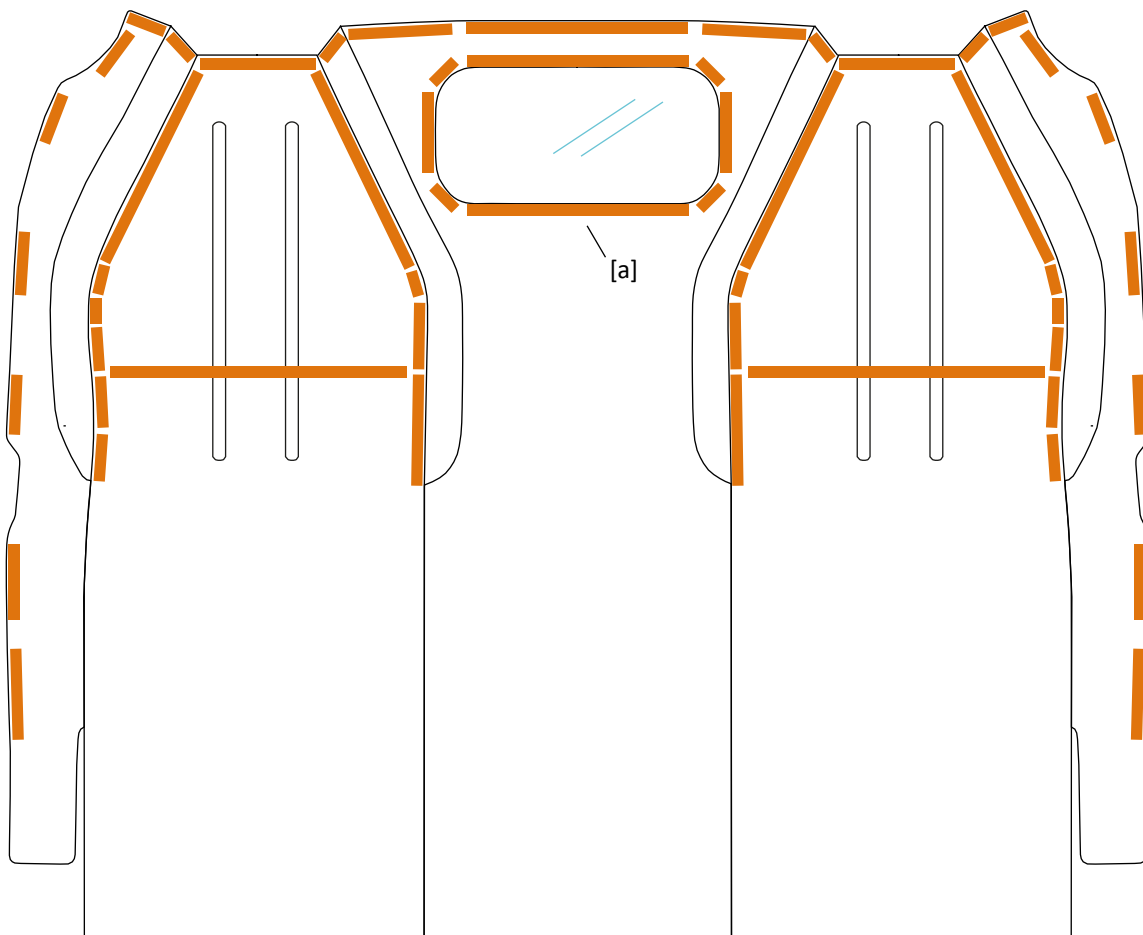

— = Self-adhesive velcro

[a] = Place velcro along the edges of the window in those cases that there is a cutout for it in the upholstery.